


ASSEMBLY INSTRUCTION

MODEL :
VIKKI OFFICE DESK
3054

- 1) DO NOT FULLY TIGHTEN THE NUT OR BOLT UNTIL THE PRODUCT IS ASSEMBLED.
(TO AVOID CAUSING DAMAGE TO THE THREAD DO NOT OVER TIGHTEN THE NUT OR BOLTS)
2) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN

PART LIST



CODE	QTY
A	1
B	1
C	2
D	1
E	1
F	1
G	1
H	1
I	1
J	1
K	3
L	3
M	3
N	3
O	3
P	1

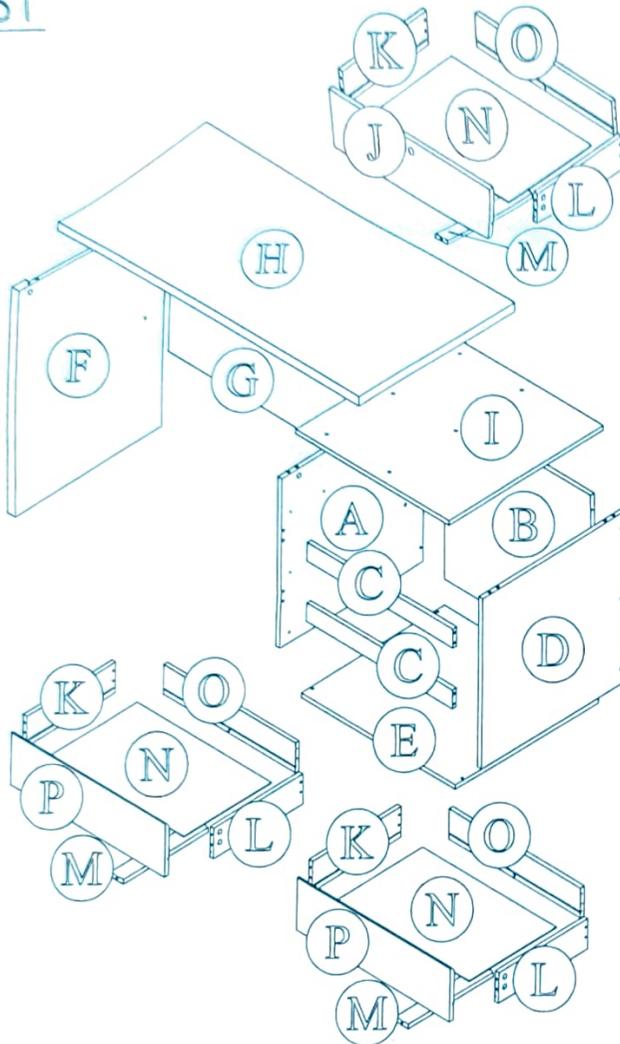

HARDWARE LIST

I	II	III	IV	V	VI	VII	VIII	IX	X	XI	
10 Pcs	25 Sets	3 Sets	24 Pcs	2 Pcs	1 Pc	32 Pcs	2 Pcs	2 Pcs	4 Pcs	4 Pcs	
XII	XIII	XIV	XV	XVI	XVII	XVIII	XIX	XX			
1 Pc	4 Pcs	14 Pcs	6 Pcs	1 Pc	8 Pcs	15 Pcs	1 Set	12 Pcs			


MINIFIX SETUP

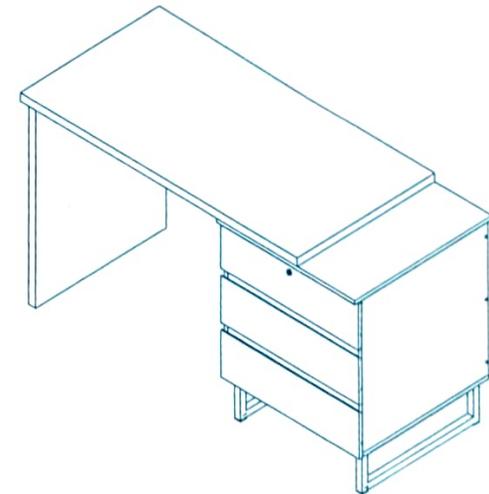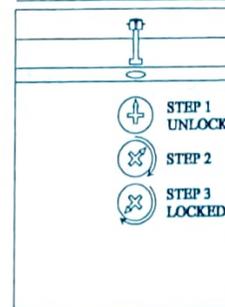

COMPLETE

STEP 1

I		10 PCS
II		25 PCS

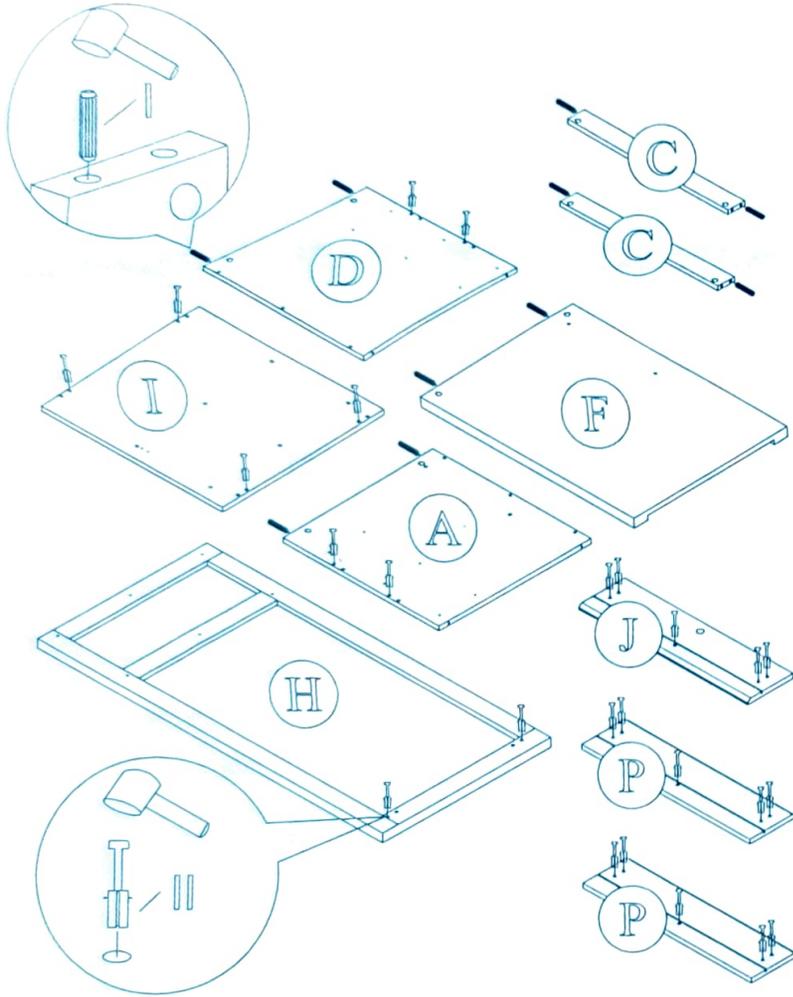


Insert 10x dowel (I) and 25x pin (II-pin) into all panel as shown.

STEP 2

III		3 SET
IV		24 PCS

Attach 3x slide rails (III) in place on each of the panels [A] [D] using 4x 12mm small screws (IV) in each rail bracket. Fasten all screws.

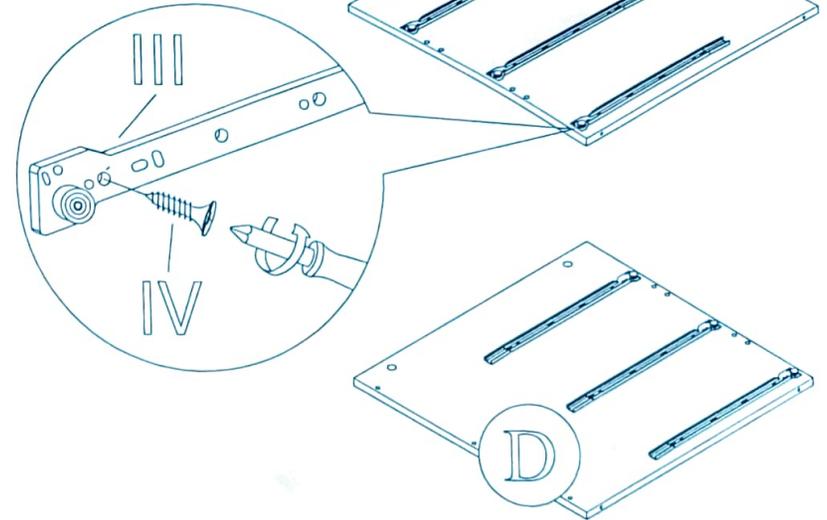


IMPORTANT NOTE :

PLEASE CHOOSE THE CORRECT SCREW HOLE BEFORE FITTING THE DRAWER RUNNER.






STEP 3

V		2 PCS
VI		1 PC
VII		2 PCS

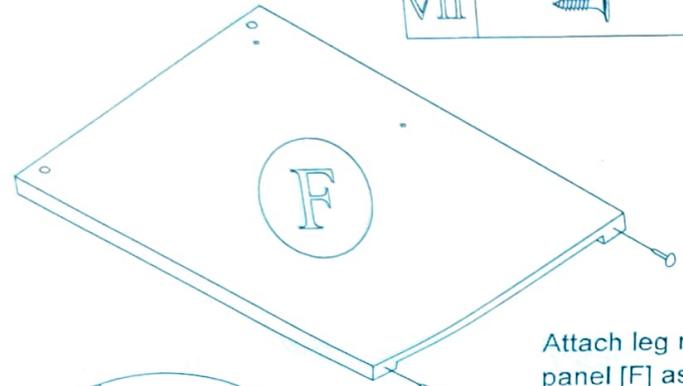

Attach leg nail (V) into panel [F] as shown with a hammer.

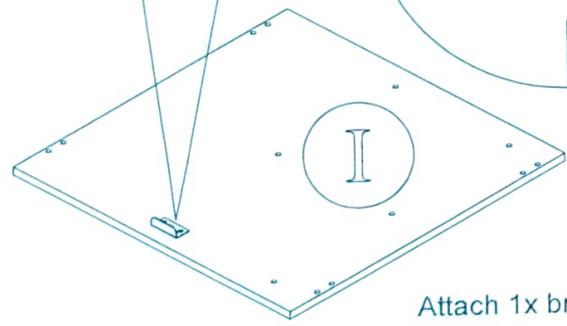
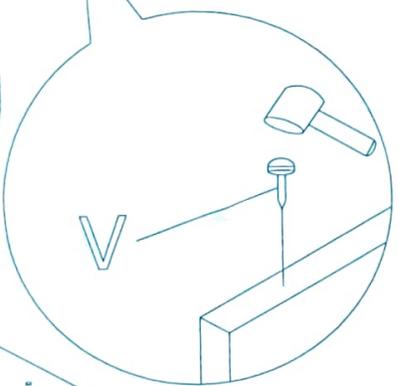
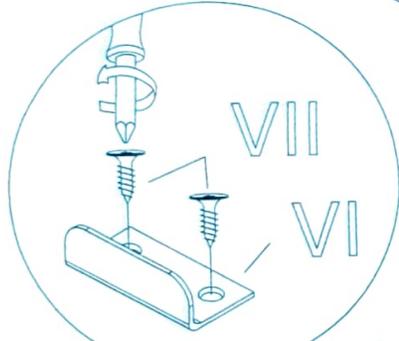


Attach 1x bracket (VI) in panel [I] using 2x screw (VII).

STEP 4

VIII		2 PCS
IX		2 PCS
X		4 PCS
XI		4 PCS
XII		1 PC
XIII		4 PCS


Attach 4x cover pin (X) into metal (VIII)x2 as shown with a hammer.

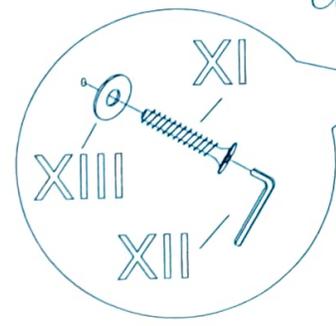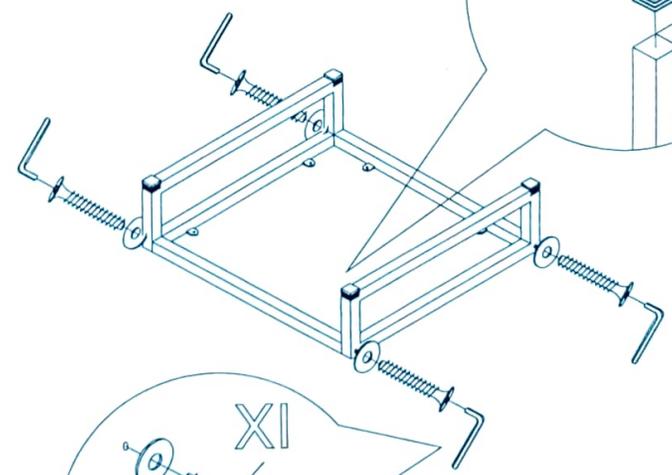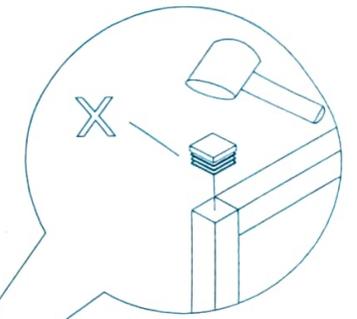

Join metal (VIII)x2 (IX)x2 by using 4x washer (XIII) and 4x screw (XI) and tighten with allen key (XII).



STEP 5

XIV		6 PCS
XII		1 PC
II		4 PCS

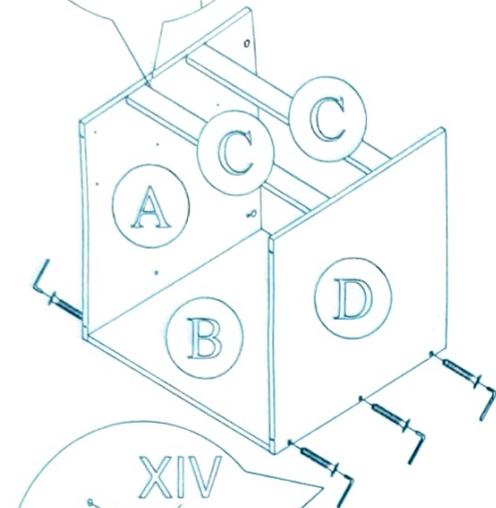


STEP 6

XIV		4 PCS
XII		1 PC

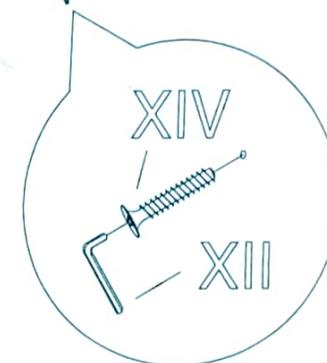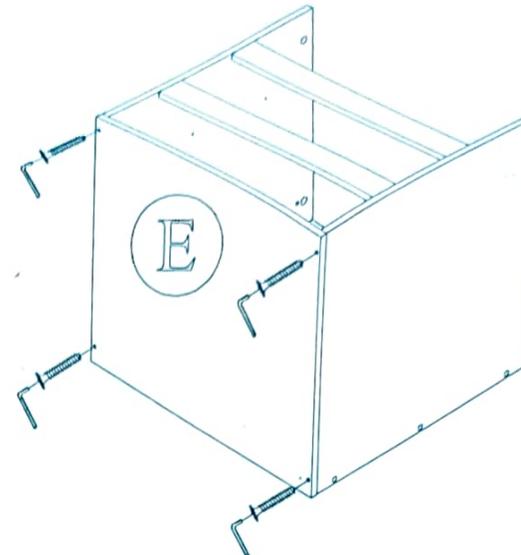

STEP 7


VII		8 PCS
-----	---	-------

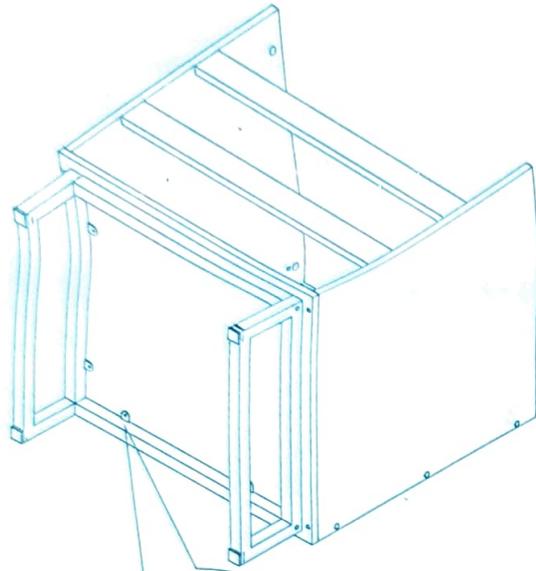

Attach assemble metal to base of panel [E] by using 8x screw (VII). Fasten all screws.

STEP 8


XIV		4 PCS
XII		1 PC

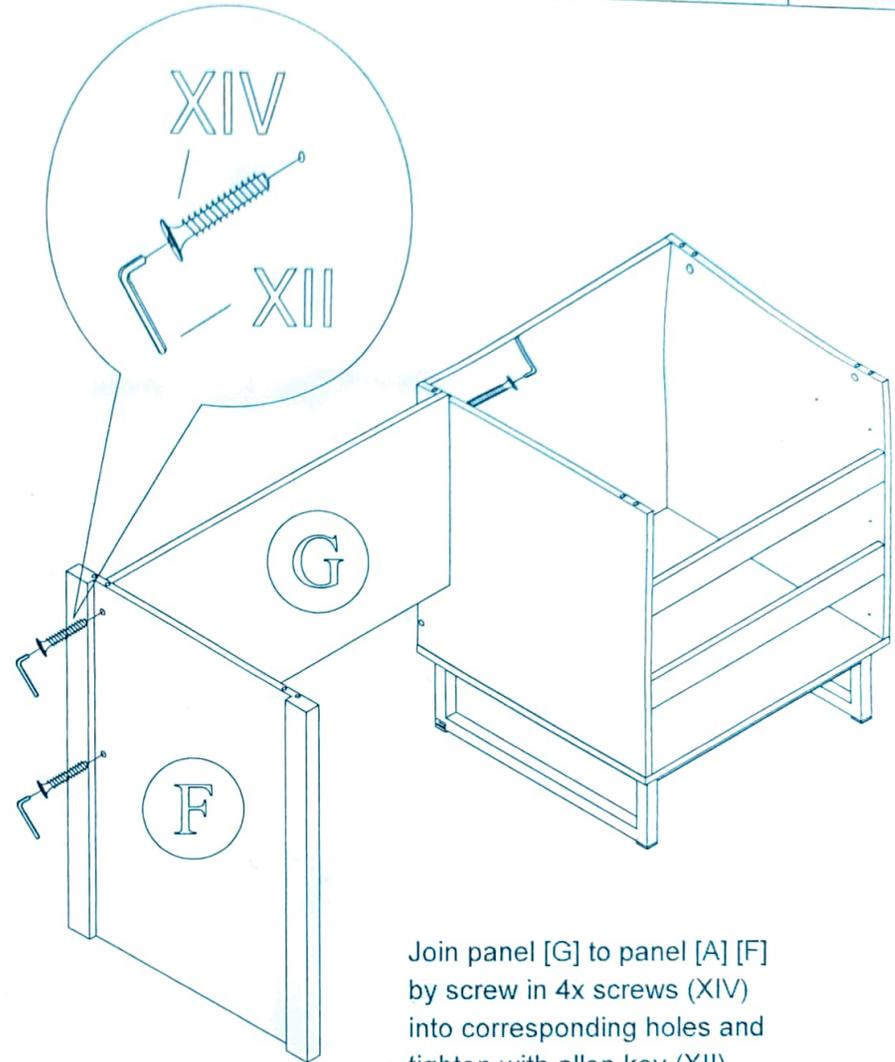

Join panel [G] to panel [A] [F] by screw in 4x screws (XIV) into corresponding holes and tighten with allen key (XII).

STEP 9

XV		6 PCS
XVI		1 PC

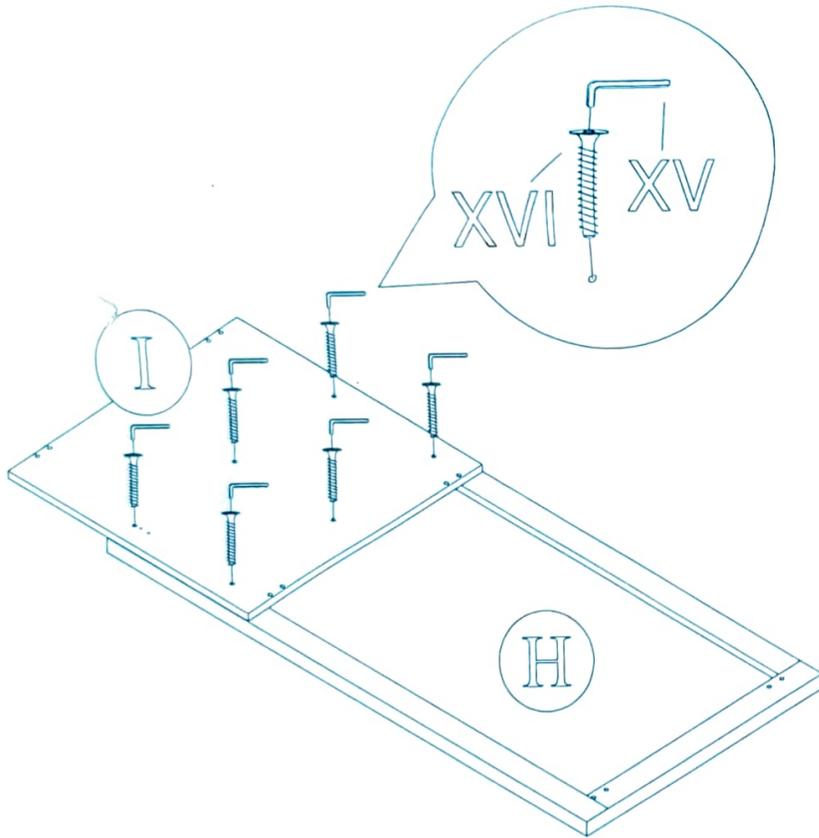


Join panel [I] to panel [H] by screw in 6x screws (XVI) into corresponding holes and tighten with allen key (XV).

STEP 10

II		6 PCS
XVII		8 PCS

Place 6x locking nuts (II nut) into holes in connecting parts and tighten with screwdriver.

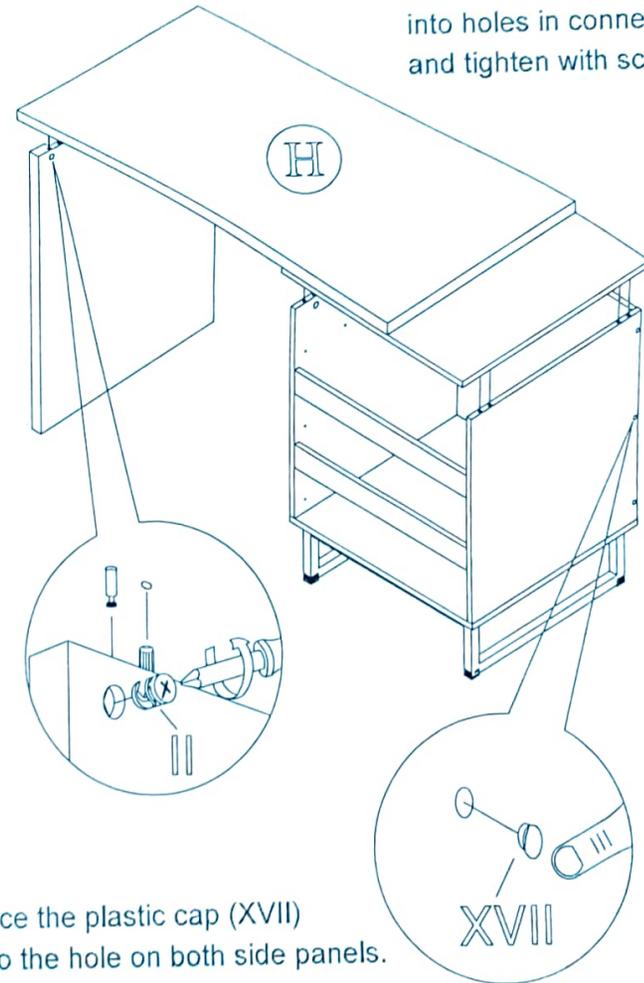


Place the plastic cap (XVII) in to the hole on both side panels.

STEP II


Place 5x locking nuts (II nut) into holes in connecting parts and tighten with screwdriver.

VII		22 PCS	II		15 PCS
XIX		1 SET	XVIII		15 PCS
XX		12 PCS	VII		3 SET

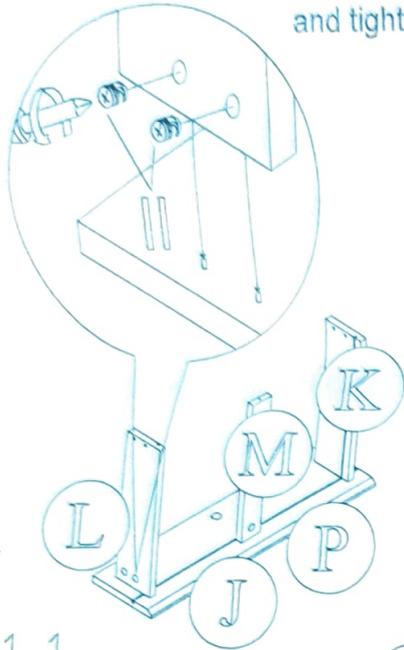


11.1

Slide the base panel [N] to place in the grooves in drawer side panels.


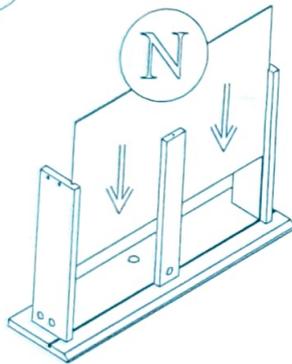


11.2

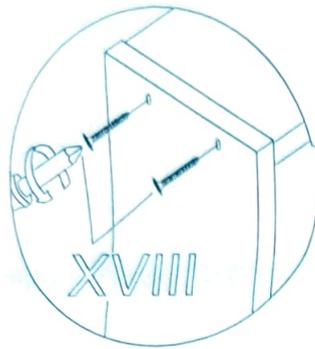



11.3

Join panel [O] with the drawer by 5x screw (XVIII).

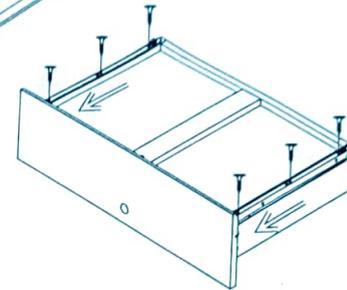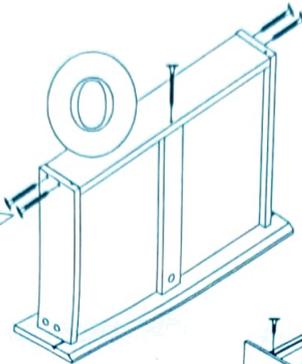


11.4

Attach 2x rail component (III) to both left and right of the drawer using 3x screw (VII) in each rail.

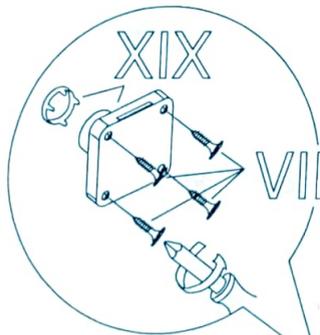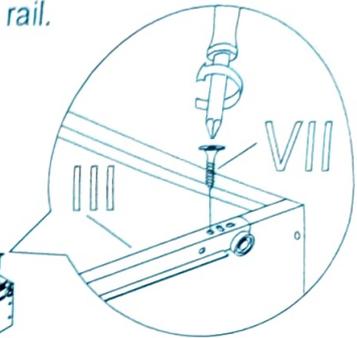


11.5

Attach 1x lock (XIX) in panel [J] by using 4x screw (VII).

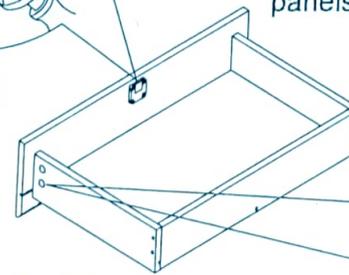

MINIFIX SETUP

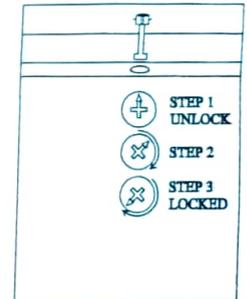

PLEASE PUSH THE DRAWER SLIDES UNTIL THE END ACCORDING TO THE ARROW'S DIRECTION SHOWN ABOVE.